


SIXCASE.COM

Ready to improve?

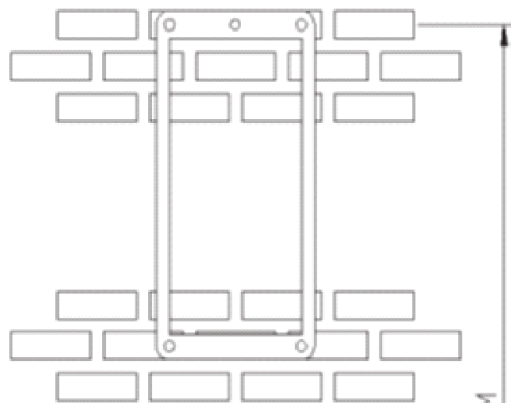

Use the supplied template to mark the holes. For further instructions, please check the manual.

Mounting on brick or concrete: Use the supplied template and mark the holes. Drill the round 10 mm holes to a minimum depth of 60 mm, to ensure there is sufficient depth for the plug. We recommend drilling the upper holes at between 1.5 and 1.6 metres from the ground. The holes should always be drilled in the middle of the brick. Install the plugs, screw the dowel screws into the plugs and mount the SixCase. The dowel screws should not extend more than 30 mm from the surface.



Mounting on wood: Drill small holes of approximately 4 mm diameter in the wood and, using a tool, screw the dowel screws firmly into the wood and then mount the SixCase as instructed above. The dowel screws should not extend more than 30 mm from the wooden surface.

250 mm

180 mm

